


Wiring Diagram — WD1-08

For External Rotor Motor Type

Single phase two speed motor with internal thermal contacts

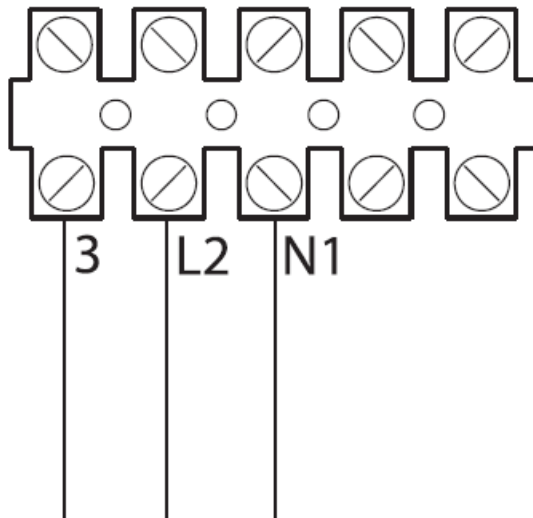

Incoming 240V active connects to terminals L2 or 3 depending on speed required.

3 = Low speed

L2 = High speed

Note:

- **Internal thermal overload protection contacts will reset and fan will re-start when temperature reduces after overload.**
- **When changing speeds, switch must break the circuit completely between speeds**